

SWITCHES, GAUGES AND CONNECTORS

Pressure and level control

The parts that tell a pump when to run and show you what the system is doing.


PUMP CONTROL

Pressure switch

Starts the pump when pressure drops to cut-in and stops it at cut-out. Both points adjust on site.

Adjustable 1.4–4.6 bar

Factory set 1.4–2.8 bar


LEVEL CONTROL

Float switch

Switches a pump on water level: fill a tank, or empty a sump. Single or dual function, on H07RN-F cable with a counterweight to set the switching level.

220–240 V · 50 Hz

10 or 16 A

Max. 55 °C


MONITORING

Pressure gauge

See system pressure at a glance, and check cut-in and cut-out when you set the switch. Dual bar and psi scale.

0–6 bar

0–10 bar


CONNECTION

Brass 5-way connector

One fitting joins the pump, vessel, pressure switch, gauge and outlet. Fewer joints, a neater install.

1" body

¼" ports for switch and gauge