



CONTROLS & ACCESSORIES

Complete the system


Everything above and around the pump, from one supplier. Tell us the job and we'll put the full set together.



CONTROLS

Control box

Every single-phase motor runs through a control box matched to its size. Run capacitor, overload protection and on/off switch in one unit. Larger motors add a start capacitor and relay.

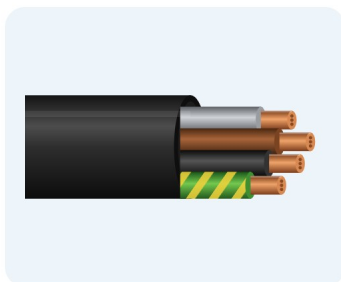

CABLE

Submersible cable

Four-core cable, cut to the length of your borehole and sized to the motor and the run.

4 × 1.5 mm²**4 × 2.5 mm²****4 × 4 mm²**

OPTIONAL

Pressure system

Steady pressure at the tap, and fewer pump starts. Pressure vessel, pressure switch, gauge, brass 5-way connector and 1" lever valve, supplied together.

60L as standard · other sizes available

Need the full set?

Pump, motor, control box, cable and pressure system, matched to your job.

+353 1 456 4099